

Details: Yoke & Tie/Waler for Use With Insulating Concrete Floor and Roofing Systems

Using the VBUCK® brand Yoke & Tie system when installing insulating concrete floor and roofing systems will save labor and help with stabilizing walls when placing concrete.



1- Push TIE through outside foam panel and assemble with YOKE.




2- Press Yoke (wire) into decking foam. YOKE & TIE™ should be installed every two feet.




3- Install VBUCK® brand reusable WALER or 1x4 by sliding button onto TIE. Use cinching action to straighten wall.



4- Finished assembly should look similar to this.

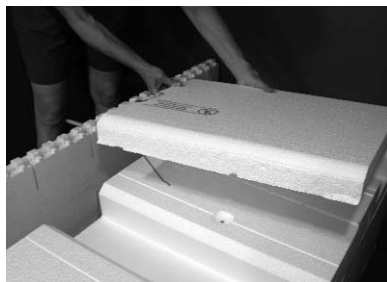

5- For beam depth of over 12.5" add second YOKE & TIE™ and WALER. If using Lite-Deck brand top hat, install before pour.

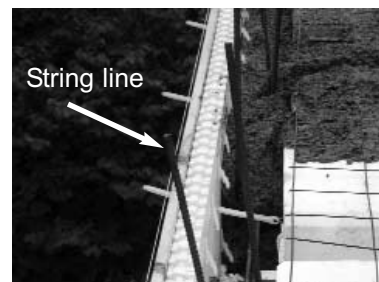

6- Place concrete. Note string line placement.

VBUCK®

U.S. PAT. 5,996,293 & 6,070,375
Canadian PAT. 2,255,256

www.vbuck.com

Vbuck® is made
of 100%
Post
Industrial Waste

Office: 435-752-8453 • FAX: 435-750-6948 • Toll Free: 888-57-VBUCK (578-2825)