


# Details: Heavy Door Preparation

Special care must be taken when door jambs require a heavy load. Follow the guidelines below to insure successful installation.

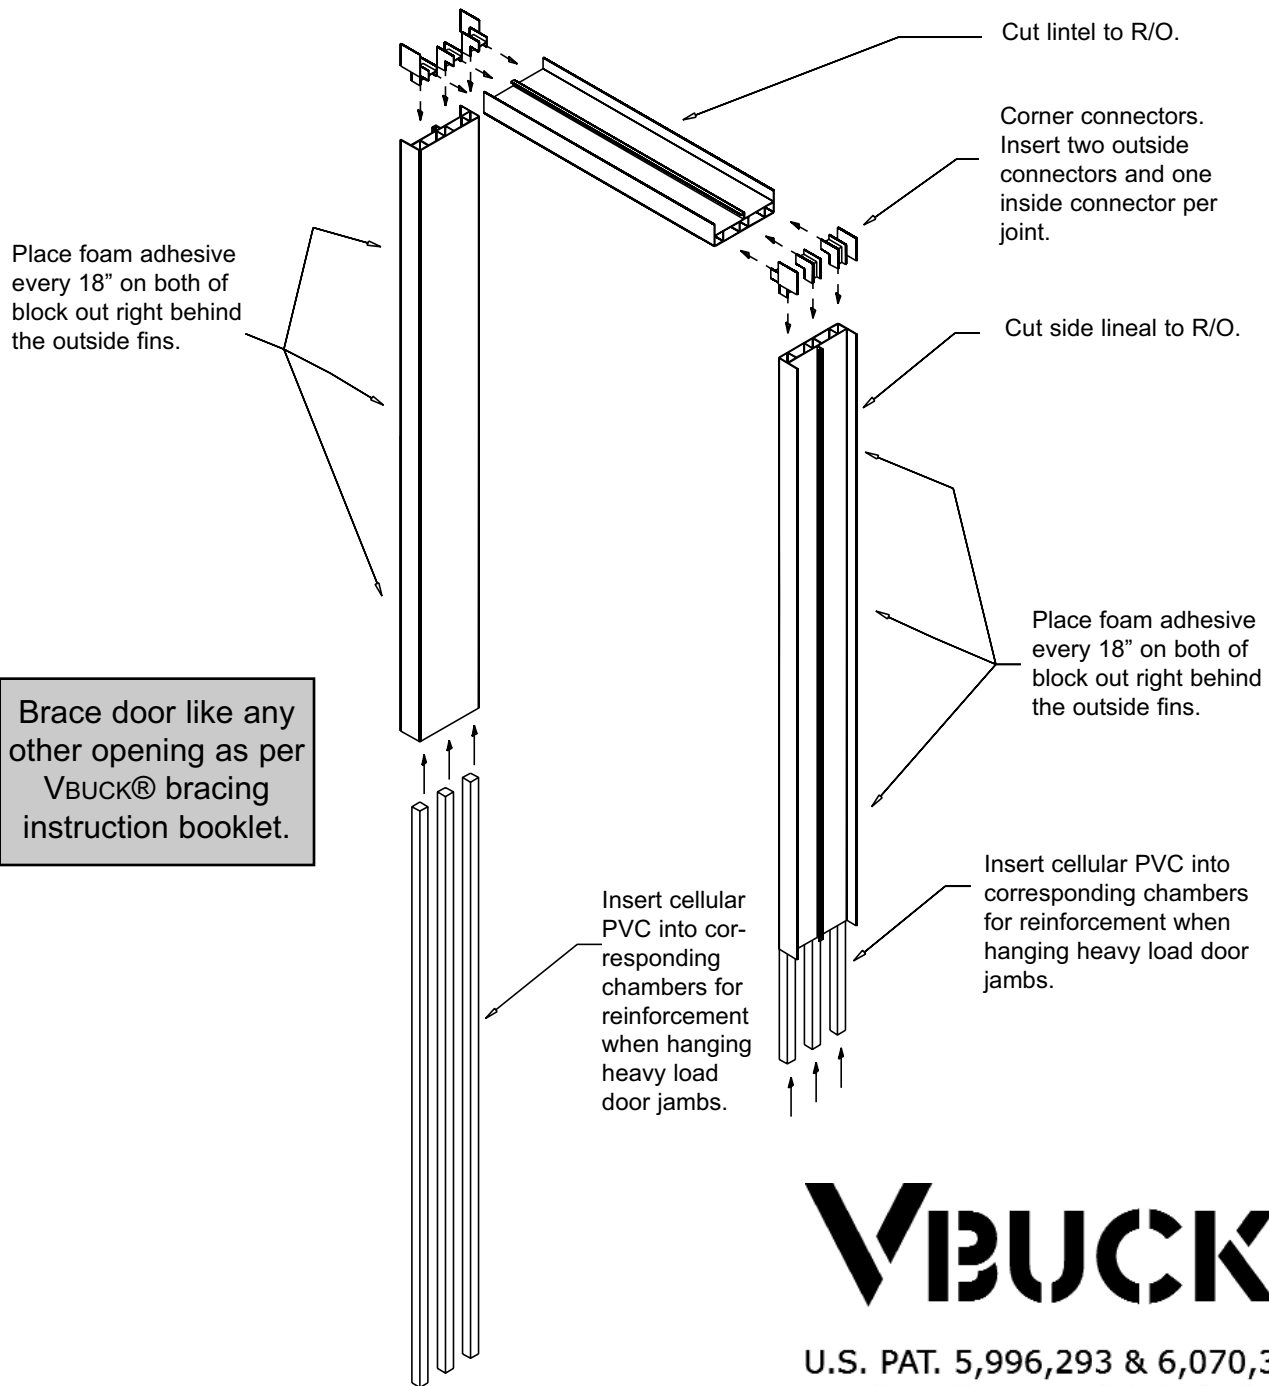

# VBUCK®

U.S. PAT. 5,996,293 & 6,070,375  
 Canadian PAT. 2,255,256

VBUCK® is made of 100% Post Industrial Waste

[www.vbuck.com](http://www.vbuck.com)

Office: 435-752-8453 • FAX: 435-750-6948 • Toll Free: 888-57-VBUCK (578-2825)